
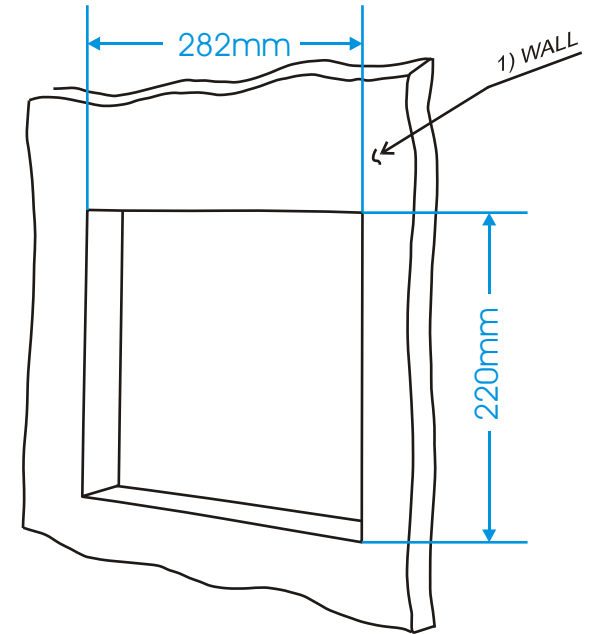


MOUNTING INSTRUCTIONS


- 1) WALL CUT-OUT PER TEMPLATE. HIGH: SET PANEL AT EYES LEVEL
- 2) REMOVE KNOCKOUT
- 3) CUT OFF CIRCUIT BEAKER
- 4) INSERT THE BACK BOX INTO THE CUT-OUT
- 5) SECURE BACK BOX TO THE WALL SURFACE WITH SCREWS AND/OR GRIPS
- 6) CONNECT ALL WIRES TO THE UNIT
- 7) INSERT THE LOWER PART OF THE UNIT TO THE BOX - BEHIND THE PINS
- 8) TWIST AND PUSH THE UPPER PART UNTIL IT THE SAFETY SPRING SNAPS TO UPPER PART OF THE UNIT
- 9) SECURE UNIT WITH M4x20mm SCREWS (PROVIDED 4x)
- 10) SNAP ON THE BEZEL TO COMPLETE THE ASSEMBLY
- 11) POWER THE UNIT

8) Safety spring

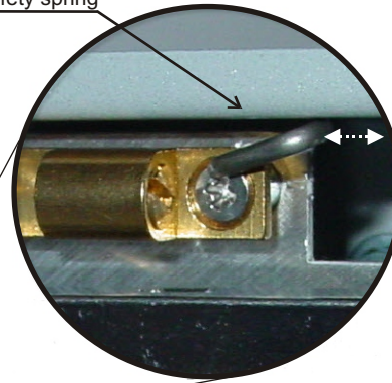


9) M4x20mm SCREW (PROVIDED 4x)


10) BEZEL

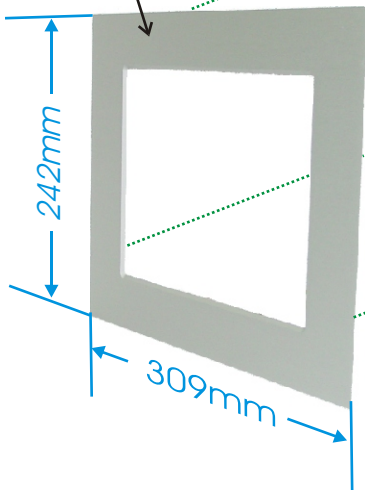

7) MTS2104 UNIT

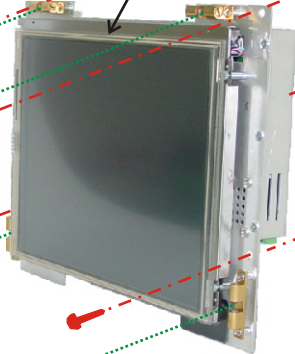


4) BACK BOX

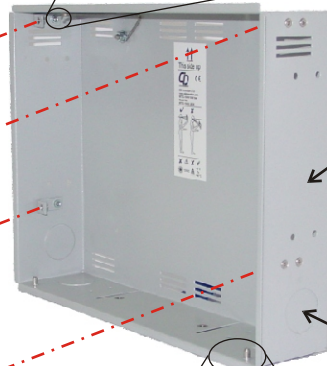

2) Knockout

7) LOWER PART BEHIND THE PINS

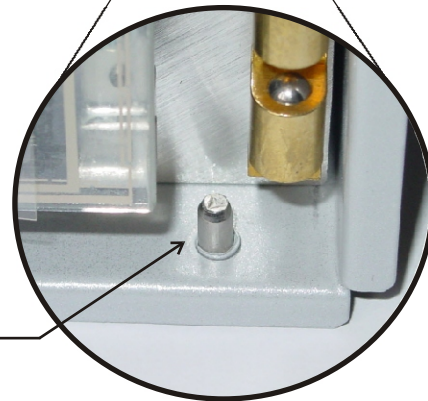

8) Safety Spring

